

## Contents

### AR-321L485-12V: TTL to RS485 Converter

### Features

#### 1 Product



- TTL to RS485 converter (TTL and RS485 cable is detachable)
- Suitable for H Series Controller when connected to Lift Control Panel AR-401-IO-0016R (16 output NC/NO changeable; default value: NC)
- Power Supply 12VDC

## Connector Table

### Cable : **CN2**

Wire Application	Pin	Color	Description
Communication	1	Thick Blue	RS-485+
Interface RS485	2	Thick Green	RS-485-







### Cable : **CN3**

Wire Application	Pin	Color	Description
Power	1	Black	Power DC 0V
	2	Yellow	TX
TTL Port	3	White	RTS(Request to Send)
	4	Orange	RX
Power	5	Red	Power DC 12V

## Wiring Diagram

BAUD4800 / N.C. Type  
EX : Node 001

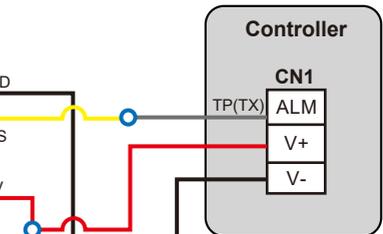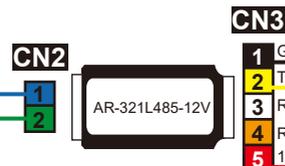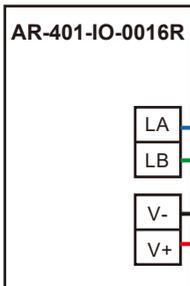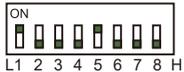

\* When H(V3) series controller connected to AR-401-IO-0016R via AR-321L485-12V converter, it use the alarm relay output. (Controller's alarm relay output is no longer to be used for alarm)

